


SUPREME MOUNT INSTALLATION INSTRUCTIONS

1. SLIDE CARRIAGE BOLTS DOWN BOTH GROOVES FOR THE NUMBER OF MOUNTING BRACKETS
2. POSITION THE BOARDS FOR THE PROPER ALIGNMENT, ALLOWING THE CARRIAGE BOLTS TO SLIP INTO THE HOLES IN THE BRACKET.
3. FASTEN FLAT WASHER, LOCKWASHER AND NUT TO THE BOTTOM SIDE OF THE BRACKET AND SECURELY TIGHTEN.

HOLES IN BRACKET NEED TO BE ON 2" CENTERS DRILL A NEW HOLE, IF NEEDED.

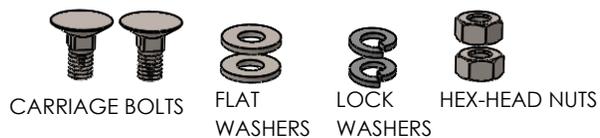

CARRIAGE BOLTS FLAT WASHERS LOCK WASHERS HEX-HEAD NUTS

IK-301 HARDWARE KIT



5974 US HWY. 129 N. UNIT O
PENDERGRASS GA. 30567

UBB-MOUNTCHANNEL-SUPREME

INTL. JL

8-30-17

SCALE: 1:5

SHEET 1 OF 1